

Accessories

Blind insert

The blind insert allows the rainwater to flow directly into the drain. it is used in place of the filter insert if you need to prevent the flow of water into the storage tank.


Extension piece

If the WFF is to be installed deeper in the ground, additional DN 300 extension pieces are available. These raise the inspection opening to ground level. They have an integral collar, which fits over the top of the filter housing, having first removed the separate collar and lid. The tube is then trimmed to length and secured with the stainless steel screws provided. The separate collar is then screwed to the top of the extension tube and the lid slotted into place.

Lifting handle


The 30 cm long lifting handle is part of the basic equipment and is adequate for a filter with one extension piece. For extreme cases where it is necessary to have a second extension tube, lifting handles of 63cm and 100 cm length are available.

Wall fixing

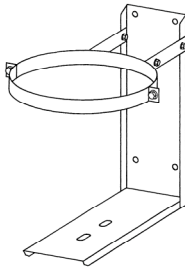

To connect the WFF to internal roof downpipes in industrial buildings we offer a stainless steel mounting bracket. This enables the WFF to be securely fixed to the internal wall.

Seepage sieve

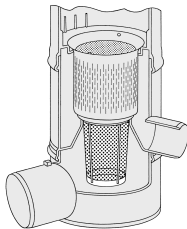

Should the WFF have to lead the excess water to soakaway – instead of to a drain – this sieve can be added to the filter insert. It catches the larger debris and must be emptied and cleaned more often than the filter. If this essential maintenance is not carried out the free exit to the soakaway may be inhibited. We will not accept any liability for any damage to goods or property that may result.